


MANUAL Talk2Guide


Diagram and Instructions

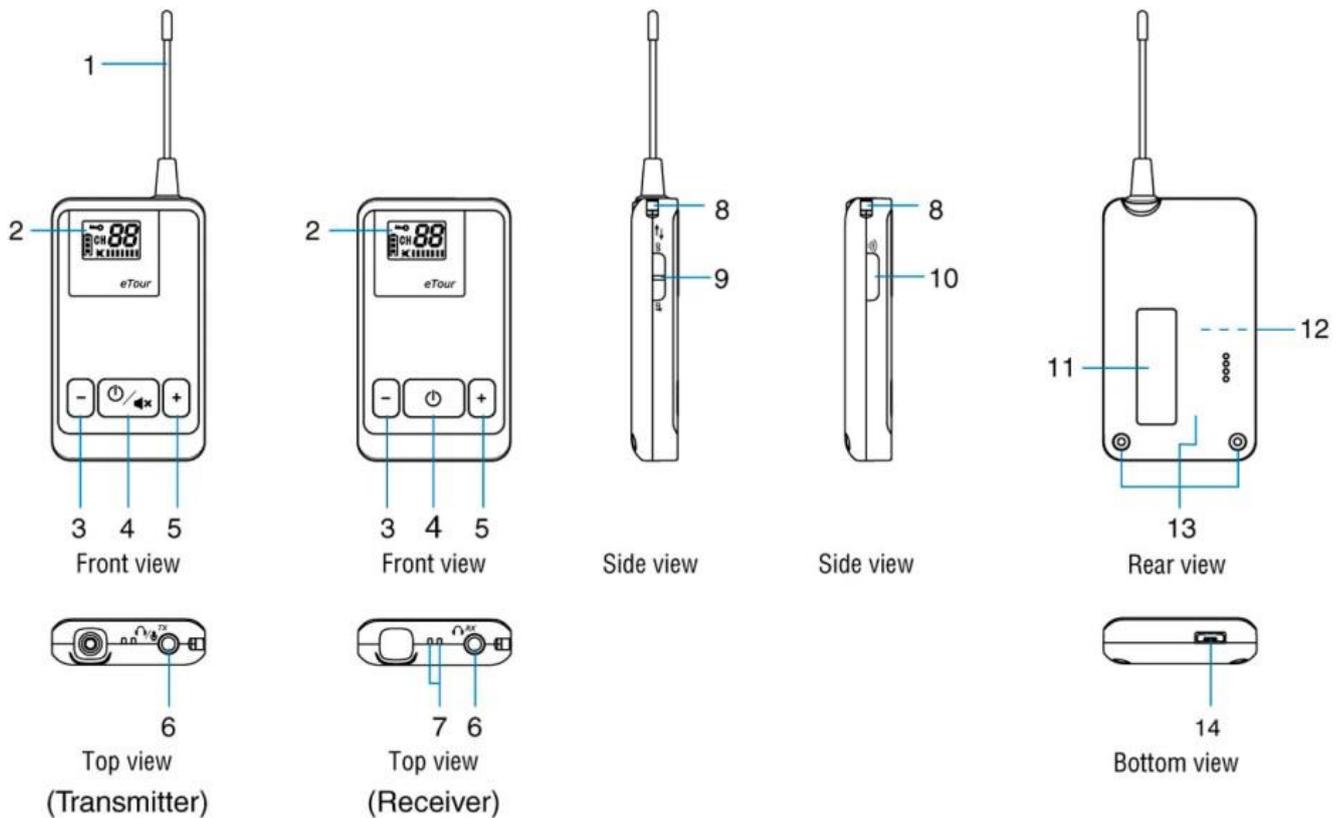

1. Antenna (for Transmitter only)
2. LCD display
3. Down button for channel and volume adjustment
4. On / Off / Mute / Set button - Transmitter
 additionalfunction for Transmitter: ✖ to mute the audio signal
- On / Off/ Set button - Receiver
5. Up button for channel and volume adjustment
6. Microphone Headset / Aux input for Transmitter
 Earphone output for Receiver
7. Built-in microphone hole on the Receiver
8. Lanyard connection point
9. Two-Way communication switch - Transmitter
10. Push talk button - Receiver
11. Label area
12. Battery compartment and built-in Li-polymer battery
13. Lid 01 battery compartment and
14. Micro-USB charging slot

IMTRADEX HÖR-SPRECHSYSTEME GesmbH

Pombergerweg 292a • A-1220 Wien / Austria • Telefon: +43 / 1 / 20 44 294-0 • Telefax: +43 / 1 / 2044294-18
 email: headsets@imtradex.at • Bankverbindung: Erste Bank • IBAN: AT88 2011 1286 1836 0600 • BIC: GIBAATWW
 registr. beim Handelsgericht Wien FN 495535d • UID-Nr. ATU73523458 • www.headsets.at • www.imtradex.at

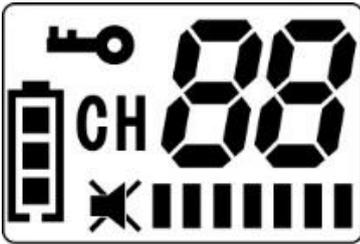

LCD Display Illustration

	TG-101T Transmitter	TG-101R Receiver		TG-101T Transmitter	TG-101R Receiver
	Channel Lock			Two-way communication on & earphone volume level 4	—
	Channel change			—	No signal received
	Mute/Mic disconnect	Mute		100% battery remaining	
	LMR-12 or Mic in with level 4 volume	earphone volume level 4		70% battery remaining	
				30% battery remaining	
	Aux in with level 5 volume	—		10% battery remaining	

Operating Instructions

Microphone and Earphone Connection

- Connect the microphone / headset to the 3.5mm socket on the transmitter and the earphones to the 3.5mm socket on the receiver. Make sure the connectors are properly inserted in place

Power On and Off

- Press and hold the power button  /  for 2 seconds to turn on the system. The LCD display will illuminate and retrieve the channel number used last time to indicate Power on successfully
- Press and hold the power button  /  for 2 seconds. The LCD display will disappear to indicate Power off completely.

Note:

- Energy saving- Receiver will automatically power off no signal is received after about 20min

How to select a channel

• The channel is preset to . If you wish to select a different channel, press  and  buttons simultaneously for 2 seconds. The : CH: sign starts flashing and  icon is removed to indicate channel escape from lock mode. Press  and  button to select your desired channel. Press  button briefly to confirm the selected channel or wait for approximately 5 seconds to automatically store and lock the selected channel.  will stop flashing and LCD displays  icon. System now returns to lock mode

Note:


- Make sure that the transmitter and receiver(s) operate on the same channel. The receiver display will keep flashing when no transmission signal is being received
- System will retrieve the channel number used previously .
- Channel SYNC -Receiver(s) which operates on same channel of the transmitter will be synced wirelessly when the channel in the transmitter has been changed as synchronization feature

IMTRADEX HÖR-SPRECHSYSTEME GesmbH

Pombergerweg 292a • A-1220 Wien / Austria • Telefon: +43 / 1 / 20 44 294-0 • Telefax: +43 / 1 / 2044294-18
 email: headsets@imtradex.at • Bankverbindung: Erste Bank • IBAN: AT88 2011 1286 1836 0600 • BIC: GIBAATWW
 registr. beim Handelsgericht Wien FN 495353d • UID-Nr. ATU73523458 • www.headsets.at • www.imtradex.at

How to adjust the Volume

Transmitter: Using the LapelMic Headset
 The Aux input port on the headset accepts external line-level audio source, For example CD/MP3 player. An ideal tool for you to play audio source while making a speech

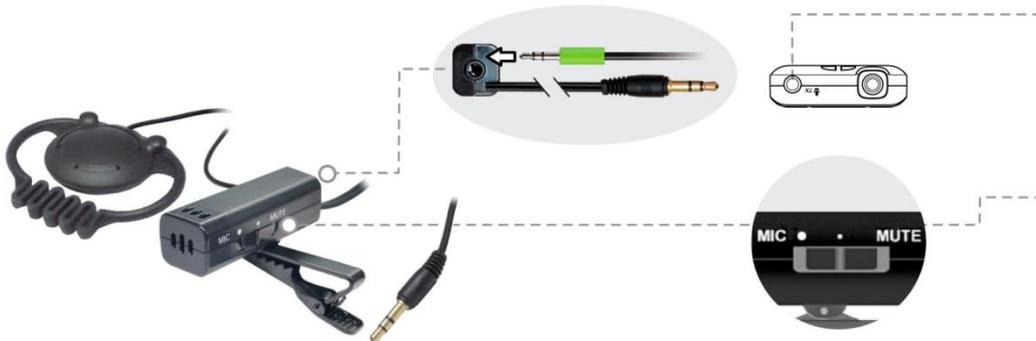

- Connect the headset to the 3.5mm socket on the transmitter
- Transmitter volume is preset at level 4 
- Press  and  button to decrease or increase the volume level. There are 4 adjustable levels from  to 
- Press mute button  briefly to mute the transmitter, press the same button  one again to recover.
- The headset features a microphone-mute switch; Switch to "mute" when you like to play the aux input source alone or to have private conversation

Transmitter: Using other microphones / headsets

⚠ The 3.5mm socket on the transmitter accepts mic and line level input source
 The default input is set to microphone level

- Connect microphone to the 3.5mm socket on the transmitter
- Transmitter volume is preset at level 4 
- Press  or  button to decrease or increase the volume level. There are 4 adjustable levels from  to 
- Press mute button  briefly to mute the transmitter, press the same button  one again to recover.

How to switch to line/mic level input manually

If you are connecting an aux input source to the transmitter, you must switch the default input level from microphone level to line level manually

- To switch to line level, press and hold the  button for 5 seconds until the flashing speaker sign and solid level 1

segment appear 

- press  or  button to decrease or increase the volume level. There are 8 adjustable levels from  to 
- Press mute button  briefly to mute the transmitter, press the same button  once again to recover

- To switch back to microphone level, press and hold the  button for 5 seconds until the solid speaker sign and solid level 4 segment appears 

Receiver:

- Receiver volume is preset at level 4 
- In normal state  be displayed, press  or  button to decrease or increase the volume level. There are 8 adjustable levels from ~ to "11111111". The LCD display ~ indicates no volume and in mute mode.
- The LCD display  indicates no volume and in mute mode.

IMTRADEx HÖR-SPRECHSYSTEME GesmbH

Pombergerweg 292a • A-1220 Wien / Austria • Telefon: +43 / 1 / 20 44 294-0 • Telefax: +43 / 1 / 2044294-18
 email: headsets@imtradex.at • Bankverbindung: Erste Bank • IBAN: AT88 2011 1286 1836 0600 • BIC: GIBAATWW
 registr. beim Handelsgericht Wien FN 495535d • UID-Nr. ATU73523458 • www.headsets.at • www.imtradex.at

Initiate Two Way Communication Function

The transmitter has the control of activating the two-way function. While transmitter is speaking, system allows one of the receivers to join the conversation. The conversation will be heard by all the participant within the group

- Slid the two-way communication switch located on the side of the transmitter to " On " position

↔ on  off, both the speaker sign and level segment will start flashing on the transmitter LCD display 

The volume level segment now represents the earphone volume level of the transmitter. Press  or  button to decrease or increase the earphone volume. ⚠ Please do not forget to attach the earpiece of the headset to your ear.



- The receiver can make speech by pressing and holding the talk button on the side  and speak to the built-in mic on top. Release the talk button after the end of the speech and allow next person to speak.
- Slid the switch " Off " ↔ on  off on the side of the transmitter to end this feature

Battery Autonomy and Charging

- When battery icon is displayed at fully autonomy , the battery contains sufficient power.
- When the battery icon is displayed as empty and flashing , this indicates low battery and only 10% battery remaining. Recharge the battery immediately via USB certified traveling charger (optional accessories) or appropriated Linkx charger station. It will take approx. 6 hours to reach full charge and provide approx. 15 hours of continuous operation for receiver and 12 hours of continuous operation for transmitter

- When charging, the battery icon displays on LCD  back and forth.

Note: .

- The transmitter or receiver will shut down automatically when charging is taking place. If you want to use the system while it's charging, simply press the power button again to turn the system back on.

IMTRADEX HÖR-SPRECHSYSTEME GesmbH

Pombergerweg 292a • A-1220 Wien / Austria • Telefon: +43 / 1 / 20 44 294-0 • Telefax: +43 / 1 / 2044294-18
 email: headsets@imtradex.at • Bankverbindung: Erste Bank • IBAN: AT88 2011 1286 1836 0600 • BIC: GIBAATWW
 registr. beim Handelsgericht Wien FN 49535d • UID-Nr. ATU73523458 • www.headsets.at • www.imtradex.at